
 


VRV460 / P1 Poste extremo

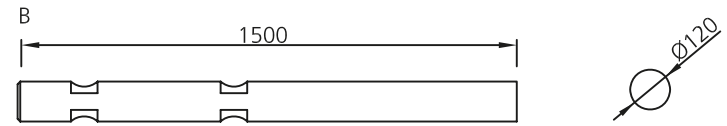

VRV460 / P Poste intermedio



VRV460 / T Travesaño