


#### **DESCRIPTION**


# V54202Q

Thermo electrical actuator 230V ON/OFF-PWM N.C. (Normally Closed), adaptor VA80 for installation included:

• Pettinaroli's 2-way, 3-way and 4-way valves (662, 663 and 664) (M30x1.5)

# **DIMENSIONS**

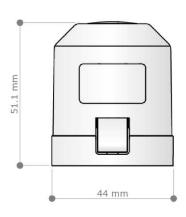

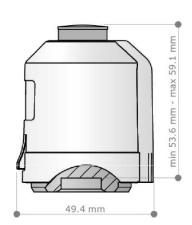

TECHNICAL DATA/ FEATURES		Storage temperature	-25° / + 60 °C
Туре	ON/OFF-PWM - N.C.	Ambient temperature	0° / + 60 °C
Operating voltage	230Vac ± 10% - 50/60 Hz	Type of protection	IP54 / II
Max. Inrush current	300 mA – 200 ms max	Weight	100 g
Stroke (actuator level)	4 mm	Colour	grey RAL7035
Operating Power	2 W	Connecting cable type	H03VV - 2 x 0.75 mm <sup>2</sup>
Opening/Closing time	~3 min.	Connecting cable length	1 m
Actuating force	100 N ± 5 %	Surge protection	2.5kV (EN 60730-1)
Fluid temperature	0/+ 100°C	Adaptor included	VA80

The actuators V542O2Q are a 230V thermoelectric valve driver suitable to control the flow on the heating and/or cooling installation in function of the room temperature value. If the installer needs a supplementary control (i.e. pump control) in function of the actuator state (Open/close) is recommended to adopt relay (look the specify paragraph dedicated to the wiring diagrams – Figure n°3).


The actuators V542O2Q are N.C. so, if the power is off, it will close; the actuator V542O2Q could be connected to "voltage free" room thermostat. To have more details regarding the wiring connection look the specific paragraph.

#### **APPROVALS**





#### WIRING DIAGRAMS

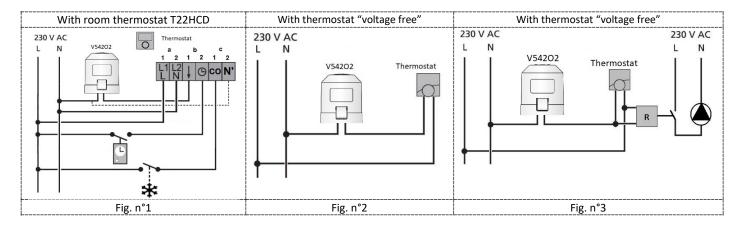


#### **LEGENDA**

N = neutral

F = Line

R = Relay

# **INSTALLATION NOTES**

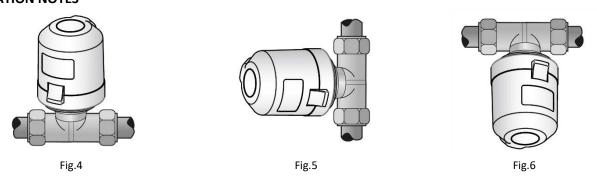

Vertical (Fig.4) or Horizontal (Fig.5) installation are recommended. An upside down (Fig.6) installation may reduce product life through special circumstances (i.e. contaminated water).

Before installing the actuator, make sure the VA80 adaptor has been correctly screwed on the valve.


# **FIRST OPEN FUNCTION**

The actuators V542O2Q are Normally Close (N.C.), so on the de-energized state, they will close from the valve. Nevertheless the installation onto the "valve" is simple thanks to the "First Open Function": the actuator is delivered partially open.

Applying the operating voltage for more than 6 minutes the "First-Open function" will unlocked.

It's recommended to apply the actuator only after that all the hydraulic installation phase is completed.

# **CHARACTERISTIC CURVE**

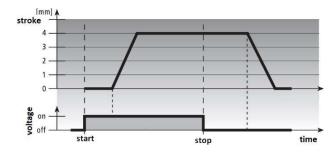

The diagram beside shows the characteristic line of the actuators V542O2Q 24V ON/OFF-PWM N.C. (Normally Close).