



Eurofins Product Testing A/S Smedeskovvej 38 8464 Galten Denmark

VOC@eurofins.com www.eurofins.com/VOC-testing

Eurofins Product Testing SPAIN S.L. Ausias March 148-150 08013 BARCELONA SPAIN

Applicant:

Saint-Gobain Weber Cemarksa, S.A. Crta, C-17, km 2 08110 Montcada I Reixac Spain

VOC TEST REPORT

Indoor Air Comfort GOLD[®]

15 December 2017

1 Sample Information

Sample name	Webercol flex3 Superapid	
Batch no.	1700612H	
Production date	08.2017	
Product type	Tile adhesive	
Sample reception	12/10/2017	

2 Brief Evaluation of the Results

Regulation or protocol	Conclusion	Version of regulation or protocol
French VOC Regulation		Regulation of March and April 2011 (DEVL1101903D and DEVL1104875A)
French CMR components	Pass	Regulation of March and April 2011 (DEVL1101903D and DEVL1104875A)
AgBB/ABG	Pass	Anforderungen an bauliche Anlagen bezüglich des Gesundheitsschutzes (ABG), Entwurf 31.08.2017
Belgian Regulation	Pass	Royal decree of May 2015 (C-2014/24239)
EMICODE	EC 1	October 2017
Indoor Air Comfort [®]	Pass	Indoor Air Comfort 6.0 of February 2017
Indoor Air Comfort GOLD [®]	Fail	Indoor Air Comfort GOLD 6.0 of February 2017
Blue Angel (RAL UZ 113)	Fail	RAL UZ 113 for "Low-Emission Floor Covering Adhesives and other Installation Materials" (Version June 2011)
BREEAM International	Compliant	GN22 v2.2 (August 2017): BREEAM Recognised Schemes for VOC Emissions from Building Products
LEED v4 (outside U.S.)	Compliant	LEED v4 for Building Design and Construction (April, 2015)
BREEAM [®] NOR	Pass	BREEAM-NOR New Construction v1.1 (May 2017)

Full details based on the testing and direct comparison with limit values are available in the following pages

Maria Pelle Madsen Analytical Chemist

Nur me Janne Rothmann Norup

Janne Rothmann Norup Analytical Service Manager

The results are only valid for the tested sample(s). This report may only be copied or reprinted in its entity, parts of it only with a written acceptance by Eurofins. 392-2017-00350801_A_EN





Table of contents

1		Sample Information	1
2		Brief Evaluation of the Results	1
3		Applied Test Methods	3
	3.1	General Test References	3
	3.2	Specific Laboratory Sampling and Analyses	3
4		Test Parameters, Sample Preparation and Deviations	4
	4.1	VOC Emission Chamber Test Parameters	4
	4.2	Preparation of the Test Specimen	4
	4.3	Picture of Sample	4
	4.4	Deviations from Referenced Protocols and Regulations	4
5		Results	5
	5.1	VOC Emission Test Results after 3 Days	5
	5.2	VOC Emission Test Results after 28 Days	6
6		Summary and Evaluation of the Results	8
	6.1	Comparison with Limit Values of the French VOC Regulation	8
	6.2	Comparison with Limit Values of the CMR Components	8
	6.3	Comparison with VOC Limit Values of AgBB/ABG	9
	6.4	Comparison with Limit Values of the Belgian Regulation	9
	6.5	Comparison with Limit Values of EMICODE	10
	6.6	Comparison with Limit Values of Indoor Air Comfort®	10
	6.7	Comparison with Limit Values of Indoor Air Comfort Gold [®]	11
	6.8	Comparison with Limit Values of Blue Angel (RAL UZ 113)	11
	6.9	Comparison with BREEAM [®] NOR Limit Values	12
	6.10	Comparison with Limit Values of LEED v4	12
7		Appendices	13
	7.1	Chromatogram of VOC Emissions after 3 Days	13
	7.2	Chromatogram of VOC Emissions after 28 Days	13
	7.3	How to Understand the Results	14
	7.4	Applied LCI and NIK Values	15
	7.5	Description of VOC Emission Test	16
	7.6	Quality Assurance	18
	7.7	Accreditation	18
	7.8	Uncertainty of the Test Method	18







3 Applied Test Methods

3.1 General Test References

Regulation, protocol or standard	Version	Version Reporting limit VOC [µg/m³]		Combined uncertainty [#] [RSD(%)]
EN 16516	October 2017	5	Toluene equivalents	22%
ISO 16000 -3 -6 -9 -11	2006-2011 depending on part	2	Toluene equivalents	22%
ASTM D5116-10	2010	-	-	-
Specifications Indoor Air Comfort Gold	6.0 of February 2017	5	Toluene equivalents	22%
French VOC	Regulation of March and April 2011 (DEVL1101903D and DEVL1104875A)	2	Toluene equivalents	22%
AgBB/DIBt	February 2015/October 2010	5	Compound Specific	22%
AgBB/ABG	31.08.2017	5	Compound Specific	22%
Belgian VOC	Royal decree of May 2015 (C - 2014 / 24239)	5	Toluene equivalents	22%
BREEAM [®] NOR	BREEAM-NOR New Construction v1.1 (May 2017)	5	Toluene equivalents	22%
LEED v4	April 2015	-	-	-
Blue Angel (RAL UZ 113)	June 2011	5	Compound Specific	22%

3.2 Specific Laboratory Sampling and Analyses

Procedure	External Method	Internal SOP	Quantification limit / sampling volume	Analytical principle	Uncertainty [*] [RSD(%)]
Sample preparation	ISO 16000-11:2006, EN16402:2013, CDPH, AgBB/DIBt, EMICODE	71M549810	-	-	
Emission chamber testing	ISO 16000-9:2006, CEN/TS 16516:2013	71M549811	-	Chamber and air control	-
Sampling of VOC	ISO 16000-6:2011, CEN/TS 16516:2013	71M549812	5 L	Tenax TA	-
Analysis of VOC	ISO 16000-6:2011, CEN/TS 16516:2013	71M542808B	1 µg/m³	ATD-GC/MS	10%
Sampling of aldehydes	ISO 16000-3:2011, CEN/TS 16516:2013	71M549812	35 L	DNPH	-
Analysis of aldehydes	ISO 16000-3:2011, EN 717-1, CEN/TS 16516:2013	71M548400	3-6 µg/m³	HPLC-UV	10%
Sampling of phthalates	ISO 16200-1, MEL-09, OSHA CSI	71M549812	60 L	XAD-2	-
Analysis of phthalates*	CPSC-CH-C1001-09.3 (2010)	71M546060	0.6 µg/m³	GC/MS	10%





4 Test Parameters, Sample Preparation and Deviations

4.1 VOC Emission Chamber Test Parameters

Parameter	Value	Parameter	Value
Chamber volume, V[L]	119	Preconditioning period	-
Air Change rate, n[h ⁻¹]	0.5	Test period	02/11/2017 - 30/11/2017
Relative humidity of supply air, RH [%]	50 ± 3	Area specific ventilation rate, q [m/h or m³/m²/h]	0.5
Temperature of supply air, T [°C]	23 ± 1	Loading factor [m²/m³]	1
		Test scenario	Wall

4.2 Preparation of the Test Specimen

The sample was mixed homogeneously, 1000 g material in 200 g water. A part of the mixture was spread onto a glass plate and drawn off over a model giving a 3 mm thick and uniform layer.

4.3 Picture of Sample



4.4 Deviations from Referenced Protocols and Regulations

No deviations from the referenced test methods were observed.





5 Results

5.1 VOC Emission Test Results after 3 Days

	CAS No.	Retention time	ID- Cat	Specific Conc.	Toluene eq.	Specific SER	R _D	R _B
		[min]	out	[µg/m³]	[µg/m³]	[µg/(m²·h)]		
VOC with NIK								
Isobutanol	78-83-1	2.07	1	14	5.0	7.1	0.0046	0.0013
1-Butanol	71-36-3	2.32	1	1200	370	620	0.41	0.41
1-Methoxy-2-propanol *	107-98-2	2.42	1	18	6.3	9.0	0.0049	0.0049
1,2-Propandiol (Propylene glycol) *	57-55-6	3.20	1	320	62	160	0.13	0.15
Saturated aliphatic hydrocarbons until C8 *	-	5.2-5.8	2	54	54	27	0.0090	0.0090
Saturated aliphatic hydrocarbons higher than C9 *	-	8.1-12.5	2	250	250	130	0.043	0.043
VOC without NIK								
Not identified *	-	1.95	4	6.8	6.8	3.4	-	-
Not identified *	-	5.84	4	30	30	15	-	-
Sum of VOC without NIK				37	37	18		
VVOC compounds								
Not identified *	-	1.88	4	5.0	5.0	2.5	-	
TVVOC				5.0	5.0	2.5		
SVOC compounds								
None determined								
TSVOC				< 5	< 5	< 3		
Carcinogens								
Total carcinogens				< 1	< 1	< 1		
Aldehydes								
Formaldehyde	50-00-0		1	< 3		< 2		
Acetaldehyde	75-07-0		1	34		17	0.029	0.029
Propionaldehyde	123-38-6		1	< 3		< 2		
Butyraldehyde	123-72-8		1	3.5		1.8		
2-butenal	123-73-9		1	< 5		< 3		
Glutaraldehyde	111-30-8		1	< 5		< 3		
R-values							0.63	0.65
тиос				1900	790	970		

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity, parts of it only with a written acceptance by Eurofins.





5.2 VOC Emission Test Results after 28 Days

	CAS No.	Retention time [min]	ID- Cat	Specific Conc. [µg/m³]	Toluene eq. [µg/m³]	Specific SER [µg/(m²·h)]	R _D	R _B
VOC with NIK								
1,2-Propandiol (Propylene glycol) *	57-55-6	3.53	1	250	51	120	0.099	0.12
Saturated aliphatic hydrocarbons higher than C9 *	-	10.0-11.8	2	36	36	18	0.0060	0.0060
VOC without NIK								
None determined								
Sum of VOC without NIK				< 5	< 5	< 3		
VVOC compounds								
None determined								
TVVOC				< 5	< 5	< 3		
SVOC compounds								
None determined								
TSVOC				< 5	< 5	< 3		
Carcinogens								
Total carcinogens				< 1	< 1	< 1		
CMR substances								
Benzene	71-43-2		1	< 1		< 1		
Trichloroethylene	79-01-6		1	< 1		< 1		
Dibutylphthalate (DBP)*	84-74-2		1	< 1		< 1		
Diethylhexylphthalate (DEHP)*	117-81-7		1	< 1		< 1		
Aldehydes								
Formaldehyde	50-00-0		1	< 3		< 2		
Acetaldehyde	75-07-0		1	< 3		< 2		
Propionaldehyde	123-38-6		1	< 3		< 2		
Butyraldehyde	123-72-8		1	< 3		< 2		
2-butenal	123-73-9		1	< 5		< 3		
Glutaraldehyde	111-30-8		1	< 5		< 3		
R-values							0.10	0.12
TVOC				280	87	140		
TVOC (French label)					87			
Toluene	108-88-3			< 2	< 2	< 1		

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity, parts of it only with a written acceptance by Eurofins.





	CAS No.	Retention time	ID- Cat	Specific Conc.	Toluene eq.	Specific SER	R _D	R _B
		[min]		[µg/m³]	[µg/m³]	[µg/(m²·h)]		
Tetrachloroethylene	127-18-4			< 2	< 2	< 1		
Ethylbenzene	100-41-4			< 2	< 2	< 1		
Xylene	1330-20-7			< 2	< 2	< 1		
Styrene	100-42-5			< 2	< 2	< 1		
2-Butoxyethanol	111-76-2			< 2	< 2	< 1		
1,2,4-Trimethylbenzene	95-63-6			< 2	< 2	< 1		
1,4-Dichlorobenzene	106-46-7			< 2	< 2	< 1		





6 Summary and Evaluation of the Results

6.1 Comparison with Limit Values of the French VOC Regulation

	CAS No.	Conc. 28 days				
		µg/m³	µg/m³	µg/m³	µg/m³	µg/m³
TVOC	-	87	>2000	<2000	<1500	<1000
Formaldehyde	50-00-0	< 3	>120	<120	<60	<10
Acetaldehyde	75-07-0	< 3	>400	<400	<300	<200
Toluene	108-88-3	< 2	>600	<600	<450	<300
Tetrachloroethylene	127-18-4	< 2	>500	<500	<350	<250
Ethylbenzene	100-41-4	< 2	>1500	<1500	<1000	<750
Xylene	1330-20-7	< 2	>400	<400	<300	<200
Styrene	100-42-5	< 2	>500	<500	<350	<250
2-Butoxyethanol	111-76-2	< 2	>2000	<2000	<1500	<1000
1,2,4-Trimethylbenzene	95-63-6	< 2	>2000	<2000	<1500	<1000
1,4-Dichlorobenzene	106-46-7	< 2	>120	<120	<90	<60

The product was assigned a VOC emission class without taking into account the measurement uncertainty associated with the result. As specified in French Decree no. 2011-321 of March 23 2011, correct assignment of the VOC emission class is the sole responsibility of the party responsible for distribution of the product in the French market.

6.2 Comparison with Limit Values of the CMR Components

CMR substances	CAS No.	Conc. 28 days μg/m³	Max. allowed air concentration µg/m³
Benzene	71-43-2	< 1	< 1
Trichloroethylene	79-01-6	< 1	< 1
Dibutylphthalate (DBP)*	84-74-2	< 1	< 1
Diethylhexylphthalate (DEHP)*	117-81-7	< 1	< 1





6.3 Comparison with VOC Limit Values of AgBB/ABG

Parameter	Test afte	er 3 days	Test after 28 days		
	Concentration mg/m³	Limit Value mg/m³	Concentration mg/m³	Limit Value mg/m³	
TVOC	1.9	≤ 10	0.28	≤ 1.0	
TSVOC	< 0.005	-	< 0.005	≤ 0.1	
R-value (dimensionless)	0.63	-	0.10	≤ 1	
Sum without NIK	0.037	-	< 0.005	≤ 0.1	
Formaldehyde	-	-	< 0.003	≤ 0.1	
Total carcinogens	< 0.001	≤ 0.01	< 0.001 ≤ 0.001		

Compliance with the limits alone does not entitle to use the AgBB requirements in conjunction with approval by DIBt. This requires an application, site inspection, and approval. See www.eurofins.com/dibt-procedures.

6.4 Comparison with Limit Values of the Belgian Regulation

Parameter	Test after 28 days		
	Concentration µg/m³	Limit Value µg/m³	
TVOC (EN 16516)	87	≤ 1000	
TSVOC	< 5	≤ 100	
R-value (dimensionless)	0.12	≤ 1	
Total carcinogens	< 1	≤ 1	
Toluene	< 5	≤ 300	
Formaldehyde	< 3	≤ 100	
Acetaldehyde	< 3	≤ 200	





6.5 Comparison with Limit Values of EMICODE

Parameter	Concentration µg/m³	EC 2 μg/m³	EC 1 μg/m³	EC 1 PLUS µg/m³
TVOC 3 days	790	≤ 3000	≤ 1000	≤ 750
TVOC 28 days	87	≤ 300	≤ 100	≤ 60
TSVOC 28 days	< 5	≤ 100	≤ 50	≤ 40
Sum without NIK 28 days	< 5	>40 ≤ 40		≤ 40
R-value 28 days (dimensionless)	0.10	>1 ≤ 1		≤ 1
Formaldehyde 3 days	< 3	≤ 50		
Acetaldehyde 3 days	34	≤ 50		
Sum Formaldehyde + Acetaldehyde [ppm]	0.019	≤ 0.05		
Sum carcinogens 3 days	< 1	≤ 10		
Sum carcinogens 28 days	< 1	≤ 1		

This test report does not alone entitle to use the protected trademark label EMICODE. For the use of an EMICODE label a license has to be applied for at the GEV, Düsseldorf, Germany. A license can only be granted for ready-to use products, if some additional requirements on contents of certain chemicals (e.g. solvent-free) are fulfilled.

Note: The label is supplemented with a final letter R (e.g. EMICODE EC 1 R) for installation products that fulfill the specification in clause 3.1.2 sentence 2 of GEV classification criteria and that therefore may require measures for ensuring occupational safety during application.

6.6 Comparison with Limit Values of Indoor Air Comfort®

	Test after 3 days		Test after	28 days
	Concentration µg/m³	Limit Value µg/m³	Concentration µg/m³	Limit Value µg/m³
TVOC (EN 16516)	790	≤ 10000	87	≤ 1000
тѕѵос	< 5	-	< 5	≤ 100
R _D -value (NIK) (dimensionless)	0.63	-	0.10	≤ 1
R _B -value (LCI) (dimensionless)	0.65	-	0.12	≤ 1
TVOC without NIK or LCI	37	-	< 5	≤ 100
Total carcinogens	< 1	≤ 10	-	-
Any individual carcinogens	-	-	< 1	≤ 1
CMR substances	-	-	< 1	≤ 1
Formaldehyde	< 3	-	< 3	≤ 60
Acetaldehyde	34	-	< 3	≤ 200
French A+/A	-	-	Complies	

Compliance with the limits alone does not entitle to use the Indoor Air Comfort label. This requires an application, site inspection, and approval. See www.eurofins.com/iac-procedures.

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity, parts of it only with a written acceptance by Eurofins.





	Test afte	Test after 3 days		28 days
	Concentration	Concentration Limit Value		Limit Value
	µg/m³	µg/m³	µg/m³	µg/m³
TVOC (EN 16516)	790	≤ 750	87	≤ 60
TSVOC	< 5	-	< 5	≤ 30
R _D -value (NIK) (dimensionless)	0.63	-	0.10	≤ 1
R _B -value (LCI) (dimensionless)	0.65	-	0.12	≤ 1
TVOC without NIK or LCI	37	-	< 5	≤ 40
Total carcinogens	< 1	≤ 10	-	-
Any individual carcinogens	-	-	< 1	≤ 1
CMR substances	-	-	< 1	≤ 1
Formaldehyde	< 3	≤ 50	< 3	≤ 10
Acetaldehyde	34	≤ 50	< 3	≤ 50
Sum Formaldehyde + Acetaldehyde [ppb]	< 5	≤ 50	-	-
Propionaldehyde	-	-	< 3	≤ 60
Butyraldehyde	-	-	< 3	≤ 60
French A+	-	-	Complies	

6.7 Comparison with Limit Values of Indoor Air Comfort Gold[®]

Compliance with the limits alone does not entitle to use the Indoor Air Comfort GOLD label. This requires an application, site inspection, and approval. See www.eurofins.com/iac-procedures.

6.8 Comparison with Limit Values of Blue Angel (RAL UZ 113)

	Test after 3 days		Test after 28 days	
	Concentration Limit Value C		Concentration	Limit Value
	µg/m³	µg/m³	µg/m³	µg/m³
тиос	1900	≤ 1000	280	≤ 100
TSVOC	< 5	-	< 5	≤ 50
R-value (dimensionless)	0.63	-	0.10	≤ 1
TVOC without NIK	37	-	< 5	≤ 40
Total carcinogens	< 1	≤ 10	-	-
Any individual carcinogens	-	-	< 1	≤ 1
Sum Formaldehyde + Acetaldehyde [ppm]	0.019	≤ 0.05	-	-





6.9 Comparison with BREEAM[®] NOR Limit Values

Parameter	Area specific emission rate	Limit Value
	µg/(m²∙h)	µg/(m²∙h)
TVOC (EN 16516) 28 days	44	≤ 200
Total carcinogens	< 1	≤ 5
Formaldehyde 3 days	< 2	≤ 24
Formaldehyde 28 days	< 2	≤ 50

6.10 Comparison with Limit Values of LEED v4

	Result	Not Compliant	Compliant	
EMICODE	EC 1	EC 2 or Fail	EC 1	EC 1 PLUS


[#] The product only complies for the emission requirements. To comply according to LEED the product also need to pass VOC content requirements.






7 Appendices

7.1 Chromatogram of VOC Emissions after 3 Days

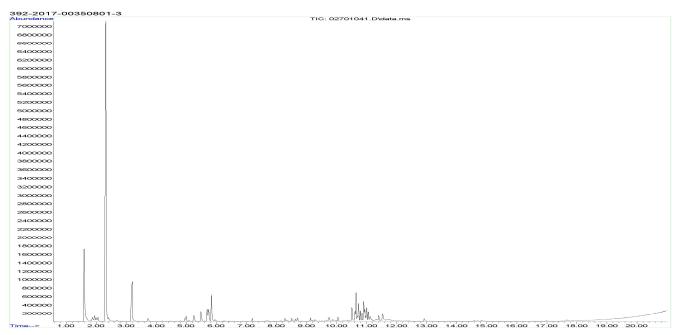

7.2 Chromatogram of VOC Emissions after 28 Days

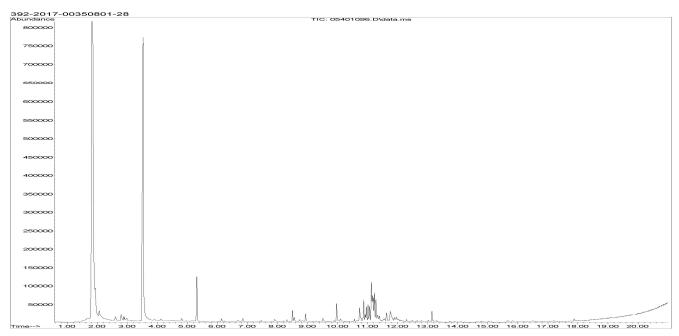

Please consider the different scales.





7.3 How to Understand the Results

7.3.1 Acronyms Used in the Report

- < Means less than
- > Means bigger than
- * Not a part of our accreditation
- ¤ Please see section regarding uncertainty in the Appendices.
- § Deviation from method. Please see deviation section
- a The method is not optimal for very volatile compounds. For these substances smaller results and a higher measurement uncertainty cannot be ruled out.
- b The component originates from the wooden panels and is thus removed.
- c The results have been corrected by the emission from wooden panels.
- d Very polar organic compounds are not suitable for reliable quantification using tenax TA adsorbent and HP-5 GC column. A high degree of uncertainty must be expected.

e The component may be overestimated due to contribution from the system SER Specific Emission Rate.

7.3.2 Explanation of ID Category

Categories of Identity:

1: Identified and specifically calibrated

2: Identified by comparison with a mass spectrum obtained from library and supported by other information. Calibrated as toluene equivalent.

3: Identified by comparison with a mass spectrum obtained from a library. Calibrated as toluene equivalent.

4: Not identified, calibrated as toluene equivalent.





7.4 Applied LCI and NIK Values

7.4.1 LCI/NIK Values for Compounds found after 3 Day Measurements

Compound	CAS No.	AgBB 2015 NIK [µg/m³]	Belgian NIK [µg/m³]
Isobutanol	78-83-1	3100	11000
1-Butanol	71-36-3	3000	3000
1-Methoxy-2-propanol *	107-98-2	3700	3700
1,2-Propandiol (Propylene glycol) *	57-55-6	2500	2100
Saturated aliphatic hydrocarbons until C8 *	-	6000	6000
Saturated aliphatic hydrocarbons higher than C9 *	-	6000	6000
Acetaldehyde	75-07-0	1200	1200

7.4.2 LCI/NIK Values for Compounds found after 28 Day Measurements

Compound	CAS No.	AgBB 2015 NIK [µg/m³]	Belgian NIK [µg/m³]
1,2-Propandiol (Propylene glycol) *	57-55-6	2500	2100
Saturated aliphatic hydrocarbons higher than C9 *	-	6000	6000





7.5 Description of VOC Emission Test

7.5.1 Test Chamber

The test chamber is made of stainless steel. A multi-step air clean-up is performed before loading the chamber, and a blank check of the empty chamber is performed.

The chamber operation parameters are as described in the test method section. (EN 16516, ISO 16000-9, internal method no.: 71M549811).

7.5.2 Expression of the Test Results

All test results are calculated as specific emission rate, and as extrapolated air concentration in the European Reference Room (EN 16516, AgBB, EMICODE, M1 and Indoor Air Comfort).

7.5.3 Testing of Carcinogenic VOCs

The emission of carcinogens (EU Categories C1A and C1B, as per European law) is tested by drawing sample air from the test chamber outlet through Tenax TA tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by ATD-GC/MS (automated thermal desorption coupled with gas chromatography and mass spectroscopy using 30 m HP-5 (slightly polar) column with 0.25 mm ID and 0.25 μ m film, Agilent) (EN 16516, ISO 16000-6, internal methods no.: 71M549812 / 71M542808B).

All identified carcinogenic VOCs are listed; if a carcinogenic VOC is not listed then it has not been detected. Quantification is performed using the TIC signal and authentic response factors, or the relative response factors relative to toluene for the individual compounds.

This test only covers substances that can be adsorbed on Tenax TA and can be thermally desorbed. If other emissions occur, then these substances cannot be detected (or with limited reliability only).

7.5.4 Testing of VOC, SVOC and VVOC

The emissions of volatile organic compounds are tested by drawing sample air from the test chamber outlet through Tenax TA tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by ATD-GC/MS using HP-5 column (30 m, 0.25mm ID, 0.25µm film) (EN 16516, ISO 16000-6, internal methods no.: 71M549812 / 71M542808B).

All single substances that are listed with a LCI/NIK value in the latest publications (hereafter referred to as target compounds) are identified if present. All other appearing VOCs are identified as far as possible. Quantification of target compounds is done using the TIC signal and authentic response factors, or the relative response factors relative to toluene. For certain compound groups, which differ significantly in chemistry from toluene, quantification is performed relative to a representative member of the group for more accurate and precise results. This can include quantification of for example glycols and acids. In addition to that, all results are also expressed in toluene equivalents. All non-target compounds, as well as all non-identified substances, are quantified in toluene equivalents.

The results of the individual substances are calculated in three groups depending on their retention time when analyzing using a non-polar column (HP-1):

- Volatile Organic Compounds (VOC) are defined as: All substances eluting between and including
- n-hexane (n-C6) and n-hexadecane (n-C16)
- Semi-Volatile Organic Compounds (SVOC) are defined as: All substances eluting after
- n-hexadecane (n-C16) and before and including n-docosane (n-C22)
- Very Volatile Organic Compounds (VVOC) are defined as: All substances eluting before n-hexane (n-C6).





Total Volatile Organic Compounds (TVOC) is calculated by summation of all individual VOCs with a concentration $\ge 5 \ \mu g/m^3$. The TVOC can be expressed either in toluene equivalents as defined in EN 16516 and similar to ISO 16000-6, or as the sum of concentrations using specific or relative response factors. In the case of summation of concentrations using authentic or relative response factors, the toluene equivalent is applied to all non-target and non-identified VOCs before summing up. Compounds regarded as VOC in line with the above definition but elute before n-C6 or after n-C16 on the HP-5 column are treated as VOC, and are thus added to the TVOC.

Total Semi-Volatile Organic Compounds (TSVOC) is calculated by the summation of all individual SVOCs expressed in toluene equivalents with a concentration $\geq 5 \ \mu g/m^3$, as defined in EN 16516. VOCs that are regarded as VOC in line with the above definition, but elute after n-C16 in this test, are not added to the TSVOC.

Total Very Volatile Organic Compounds (TVVOC) is calculated by the summation of all individual VVOCs with a concentration $\ge 5 \ \mu g/m^3$ and expressed in toluene equivalents. VOCs that are regarded as VOC in line with the above definition, but elute before n-C6 in this test, are not added to the TVVOC.

This test only covers substances which can be adsorbed on Tenax TA and can be thermally desorbed. If emissions of substances outside these specifications occur then these substances cannot be detected (or with limited reliability only).

7.5.5 Calculation of R Values with LCI Lists

The concentrations of detected compounds $\geq 5 \ \mu g/m^3$ are divided by their respective LCI/NIK value (if defined in the given publication). The sum of the quotients gives the R value, which can be mathematically expressed:

$$R = \sum_{i}^{n} \left(\frac{c_{i}}{NIK_{i}} + \dots + \frac{c_{n}}{NIK_{n}} \right)$$

This R value is calculated, depending on the purpose of this test, for the European LCI list, for the German LCI/NIK list (R_D), and/or for the Belgian LCI list (R_B).

All VOCs without published LCI/NIK value and concentration $\geq 5 \ \mu g/m^3$ are summed up as sum of VOCs without LCI/NIK if required by the standard or protocol.

7.5.6 Testing of Aldehydes

The presence of aldehydes is tested by drawing air samples from the test chamber outlet through DNPHcoated silicagel tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by solvent desorption and subsequently by HPLC and UV-/diode array detection.

The absence of formaldehyde and other aldehydes is stated if UV detector response at the specific wavelength is lacking at the specific retention time in the chromatogram. Otherwise it is checked whether the reporting limit is exceeded. In this case the identity is finally checked by comparing full scan sample UV spectra with full scan standard UV spectra.

7.5.7 Testing of Phthalates

The presence of phthalates is tested by drawing air samples from the test chamber outlet through tube with XAD-II adsorbent after the specified duration of storage in the ventilated test chamber. Analysis is performed by solvent desorption and subsequently by GC/MS. Analysis of phthalates is not currently covered by the accreditation (Internal methods no.: 71M549812 / 71M546060).





7.6 Quality Assurance

Before loading the test chamber, a blank check of the empty chamber is performed and compliance with background concentrations in accordance with EN 16516 / ISO 16000-9 is determined.

Air sampling at the chamber outlet and subsequent analysis is performed in duplicate. Relative humidity, temperature and air change rate in the chambers is logged every 5 minutes and checked daily. A double determination is performed on random samples at a regular interval and results are registered in a control chart to ensure the uncertainty and reproducibility of the method.

The stability of the analytical system is checked by a general function test of device and column, and by use of control charts for monitoring the response of individual substances prior to each analytical sequence.

7.7 Accreditation

The testing methods described above are accredited on line with EN ISO/IEC 17025 by DANAK (no. 522). This accreditation is valid worldwide due to mutual approvals of the national accreditation bodies (ILAC/IAF, see also www.eurofins.com/galten.aspx#accreditation.

Not all parameters are covered by this accreditation. The accreditation does not cover parameters marked with an asterisk (*), however analysis of these parameters is conducted at the same level of quality as for the accredited parameters.

7.8 Uncertainty of the Test Method

The relative standard deviation of the overall analysis is 22%. The expanded uncertainty Um equals 2 x RSD. For further information please visit www.eurofins.dk/uncertainty.